

## 安裝說明書暨機體部位示意圖

- 安裝時機體禁止傾斜，安裝地點需避免陽光直接曝曬，如需架高機後體與牆壁間距需至少60cm以上淨空，以利運轉時入風之通暢及保養維修之用。
  - 請注意本機使用電壓標示(標示於機體後下方電源線端處)接錯電壓將導致本機嚴重毀壞及發生危險之可能性。
  - 本機於停止運轉時，觸控面板上之電源開關需確實關閉，以確保用電安全。
  - 請單獨使用15A以下無熔絲斷路器及漏電斷路器，勿與其他機器或電器品共用，並接妥地線以確保用電安全(風扇馬達/沉水幫浦保險絲規格為10A/3A\*20mm)。
1. 請參照下圖(1)自備並接妥22mm水源管，並在水源管上以電鑽鑽一個7mm圓孔。
  2. 鬆開入水閥門器2顆螺絲。
  3. 將入水閥門器之進水端口對準水源管上之圓孔酌力鎖緊，塑膠螺絲勿轉太緊。
  4. 打開水源管開關並推開入水閥門器白色開關(當您看見小圓孔表示已開啟)。
- 視水壓強弱而定一般約需10-20分鐘，達滿水位時控制面板上之無水指示燈將自動熄滅，此時已完成所有裝機動作，請您繼續參閱操作使用說明書。
  - 請詳閱本說明書內容，如有疑問，請您向購買之經銷商洽詢。


(1)





(2)



(3)

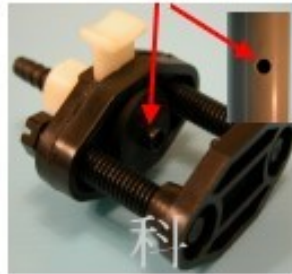

(4)

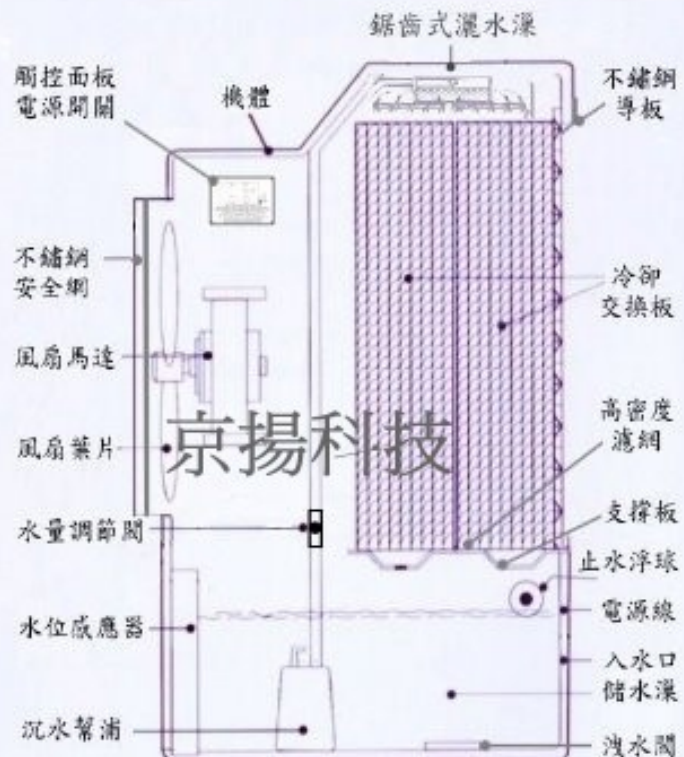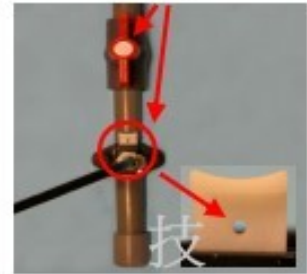

## 操作使用暨清潔保養說明書

感謝貴寶號採購本產品,請於使用前詳閱本操作說明書內容:

注意事項:(本產品類屬工業用風機),

- 本機於停止運轉時,觸控面板上之電源開關需確實關閉,以確保用電安全,
- 本機風扇馬達附溫度過載保護系統,水幫浦附無水斷電系統及自動補水裝置,
- 本機後體為冷卻交換板與水-空氣行循環交換作用,請勿任意碰觸或撞擊,
- 本機運轉時風扇葉片高速轉動,嚴禁幼童靠近或以異物插入,以免發生危險,
- 新機使用初期偶有異味,乃冷卻交換板黏合膠自然味道無害人畜敬請安心使用,
- 新機或冬季長時間閒置未使用,在初期使用時因水幫浦內部空氣壓力可能導致水幫浦無法抽水,請間隔3-5秒重複開啟與關閉水幫浦開關即可恢復正常運轉,
- 本機之優越性能尤其表現在高溫度,低濕度之酷熱環境,

清潔保養:(請參閱本機後體-清潔保養拆卸圖),

- 機體外殼請以中性清潔液擦拭,
- 清潔保養前請先關閉電源,水源,打開機後體下方洩水閥,
- 請視使用環境定期清洗機體內部,儲水澡,冷卻交換板,濾綿,鋸齒式灑水澡,清洗完成後,請依序原位裝回,如未定期實施清潔保養,會因污泥雜質沉澱阻塞水幫浦正常運轉,將導致水幫浦及PC機板燒毀,
- 冷卻交換板請以長毛軟刷及低壓水柱刷洗,嚴禁以高壓水柱或強力風槍噴洗,
- 冬季或長時間不使用時請先實施清潔保養程序,關閉電源,水源,請勿以不透氣塑膠布包裹,以免內部零件受潮導致損壞,
- 平時需不定期檢查電源線,入水閥門器,入水軟管等,是否損壞破損,以確保使用安全,

操作說明:

- 開啟順序>電源開關>水幫浦開關>待30秒後再開風扇開關,
- 關閉順序>水幫浦開關>風扇開關>電源開關,
- 風扇開關在未啟動時,水幫浦將於60秒後自動斷電,
- 本機之手調式風向導流板可依時節變化及現場使用環境所需調整出風向,
- 請詳閱本說明書內容,如有疑問,請您向購買之經銷商洽詢,





- 打開洩水閥，將污水洩除。
- Turn on water value to release filthy water.



- 鬆開2顆螺絲，取下不鏽鋼導板。
- Loose two screws, and take out stainless guide board.

• 清潔保養拆卸圖 •

1. 清洗前請先關閉電源、水源。
2. 依右圖例清洗完成後，請依反順序裝回。
3. 請參閱清潔保養說明書其他內容之說明。

• Dismantle Drawing of Cleaning & maintenance •

1. Turn off power source and water source before cleaning.
2. Do cleaning according to the right drawing, and then assemble them back in a reverse order.
3. Refer to the description of the cleaning & maintenance manual.

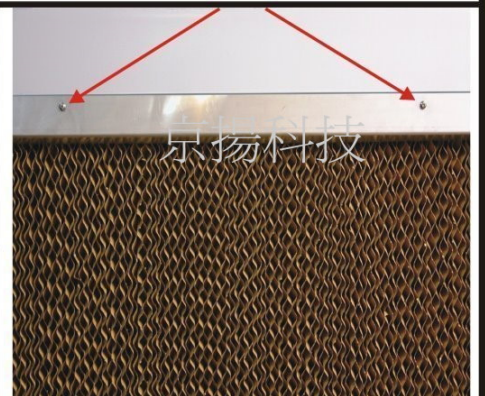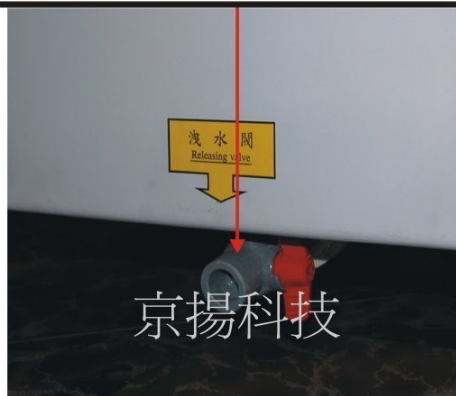

- 先取出中間一片冷卻交換板，依序再取出其餘五片以清水清洗。
- First take out a cooling switch board in the middle, and take the rest five boards in sequence to flush.



- 取出高密度濾綿以清水清洗或更換。
- Take out the high-density filter cotton to flush or be replaced.



- 取出支撐板以清水清洗。
- Take out support board to flush.



- 清洗儲水渠 (風扇馬達, 電源控制盒底座嚴禁直接澆水)。
- Flush water-storage tank (Do not pour water to fan motor and the base of power control box.)



- 鬆開機身兩側固定螺絲, 從機體內部頂端取下管件。
- Loose screws at two sides and part is taken off from inner top.



- 清洗疏通灑水管及灑水渠。
- Wash and clear the sprinkling pipe and vessel.

